

## Installation instruction luminaire with Outdoor Lamp Controller (OLC)

This luminaire is equipped with a Luminext OLC with a unique code to remotely control and dim the lighting. The OLC communicates with Luminizer via segment controller or gateway. Follow the installation instructions below to ensure correct operation and to avoid additional costs.

- 1) Make sure that the installation complies with the applicable standards and the safety instructions below.
- 2) Do not install the fixture if it has any defects or damages.
- 3) Mount the luminaire according to the luminaire supplier's instructions.
- 4) **It is crucial to link the unique (bar)code of the OLC to the location (coordinates) of the lamppost and luminaire:**
  - **On the outside of the luminaire or at the bottom of the power cable you will find the barcode sticker with Luminext logo**
  - **Scan this barcode with the barcode scanner to import the code in Luminizer or register the code by hand on the Luminizer import sheet**
- 5) After switching the power supply, the connected luminaire should switch on, this can take up to 20 seconds. If this is not the case, check the incoming power supply and/or wiring.
- 6) Mount the associated segment controller or gateway according to the supplied installation instructions.
- 7) Send the import sheet with installation data including desired dimming schedule and / or dimming groups to [support@luminext.eu](mailto:support@luminext.eu)

### Veiligheidsinstructies



- Installation of the luminaire must be done by a skilled, qualified employee.



- The electrical installation to which the luminaire with the OLC is connected must comply with national standards and regulations, must be correctly executed and in good condition.



- The installation to which the luminaire with the OLC is connected must be equipped with a possibility to interrupt the voltage.



- The mains voltage connection of the luminaire with OLC must be fitted with a fuse of at least 2A.

- Maintenance: disconnect the power before performing maintenance on the luminaire. Do not open the OLC. In case of defect, it must be replaced.

Voor meer informatie neem contact op met de leverancier. / For more information please contact the supplier.

Luminext BV | Schoudermantel 37 | 3981 AE Bunnik | Nederland | +31(0)30 207 2017 | [support@luminext.eu](mailto:support@luminext.eu) | [www.luminext.eu](http://www.luminext.eu)